## **Baffle and Shredder Kits**



### For RC(M)5020 Rotary Cutters

**Manual No. 330-148M** 

### **Before You Start**



When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

**IMPORTANT:** Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

The Baffle Kit and Shredder Kit are exclusively designed for your 20' Land Pride Rotary Cutter. Please read these installation instructions and your Rotary Cutter Operator's Manual thoroughly before beginning. Especially read information relating to safety concerns. Also included in the Operator's Manual is important information on operation, adjustment, troubleshooting, and maintenance for this attachment (some manual sections do not apply to all accessories).

A separate Rotary Cutter Parts Manual is available free of charge at www.landpride.com or can be purchased from your nearest Land Pride dealer. Have the model and serial numbers of your cutter handy when placing an order.

#### **Manual Part Numbers:**

| Operator's Manual | 318-474M |
|-------------------|----------|
| Parts Manual      | 318-474P |

## **General Information**

These assembly instructions apply to the Baffle and Shredder Kits listed below:

| 330-309A | SHREDDER/FIXED BLADE/BAFFLE |
|----------|-----------------------------|
|----------|-----------------------------|

330-114A BAFFLES, FRONT

330-308A SHREDDER/FIXED BLADE

330-585A BAFFLES, REAR

### **Tools required:**

- Safety Glasses
- Work Gloves
- Two 3/4" wrenches . . . . . . . . . . . . . . . . . Baffle Kit OnlyTwo 1 1/2" wrenches . . . . . . . . . Shredder Kit Only

• One 55mm wrench . . . . . . . . . Shredder Kit Only

#### **Further Assistance**

Your dealer wants you to be satisfied with your new Baffle and Shredder Kits. If for any reason you do not understand any part of this manual or are not satisfied with the service received, the following actions are suggested:

- Discuss the matter with your dealership service manager making sure he is aware of any problems you may have and that he has had the opportunity to assist you.
- 2. If you are still not satisfied, seek out the owner or general manager of the dealership, explain the problem and request assistance.
- 3. For further assistance write to:

#### Land Pride Service Department 1525 East North Street

P.O. Box 5060 Salina, Ks. 67402-5060

E-mail address lpservicedept@landpride.com

## **Safety Information**



### **DANGER**

Always disconnect main driveline from tractor PTO before servicing cutter deck. Cutter can be engaged if tractor is started resulting in cutter damage, bodily injury and/or death.



## **WARNING**

Never work under equipment supported by hydraulics. Hydraulics can drop equipment if controls are actuated or if hydraulic lines burst. Either situation can drop the cutter instantly even when power to the hydraulics is shut off.

## **Assembly Instructions**

A detailed listing of parts for the Baffle and Shredder Kits is provided on pages 10 & 11. Use the list as a checklist to inventory parts received. Please contact your local Land Pride dealer for any missing hardware.


**IMPORTANT:** Read all "Safety Information" above before working on and around the cutter decks.

 Cutters with Serial No. 536742 and lower: Lower cutter and wings to the lowest position.

Cutters with Serial No. 536743 and above: Raise wings fully up and lock into position with transport locks.

© Copyright 2010 Printed 3/11/10 **1** 



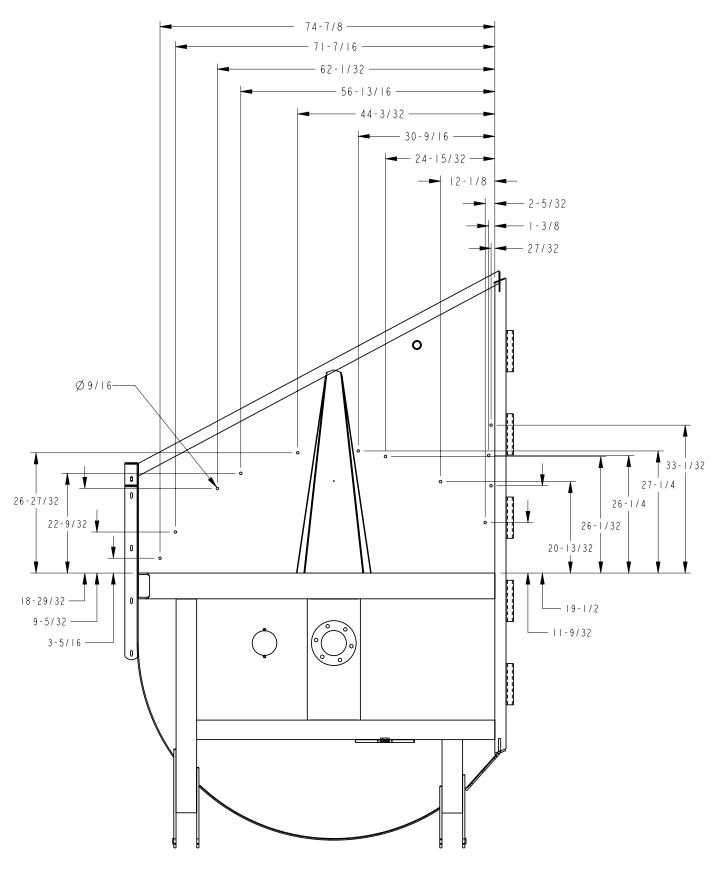

Bolt Hole Pattern (Left Wing Shown) Figure 1



3

- Place tractor gear selector in park and/or set brakes, shut engine off and remove ignition key.
- Disconnect main driveline from tractor PTO.

## Shredder/Fixed Blade/Baffle Kit Kit No. 330-309A

This Kit consist of Kits 330-114A and 330-308A. Therefore, see Kit No. 330-114A below for assembly instructions of the front baffles and Kit No. 330-308A on page 4 for assembly instructions of the shredder blades and fixed blades.

## Front Baffle Kit Kit No. 330-114A


A detailed listing of parts for this accessory kit is provided on page 10. Use the list as a checklist to inventory parts received. Please contact your local Land Pride dealer for any missing hardware. **NOTE:** Drilling holes is not necessary on models manufactured after Serial No. 536742. Skip to step 2 below if cutter Serial No. is 536743 or higher.

#### Refer to Figure 1 on page 2:

1. Locate and drill twelve 9/16" dia. holes on each wing deck as shown in Figure 1. If holes already exist, skip to step 2 below.

#### Refer to Figure 2:

- 2. The wings should be raised and locked into position for the remainder of the assembly.
- 3. Attach four front baffles (#1) to the left-hand wing deck with 1/2"-13 x 1 1/2" GR5 hex head bolts (#2), 1/2" flat washers (#4) and 1/2" hex whiz nut (#3).
- 4. Tighten nuts to 76 ft-lbs of torque.
- 5. Repeat steps 3 & 4 for the right-hand wing deck.

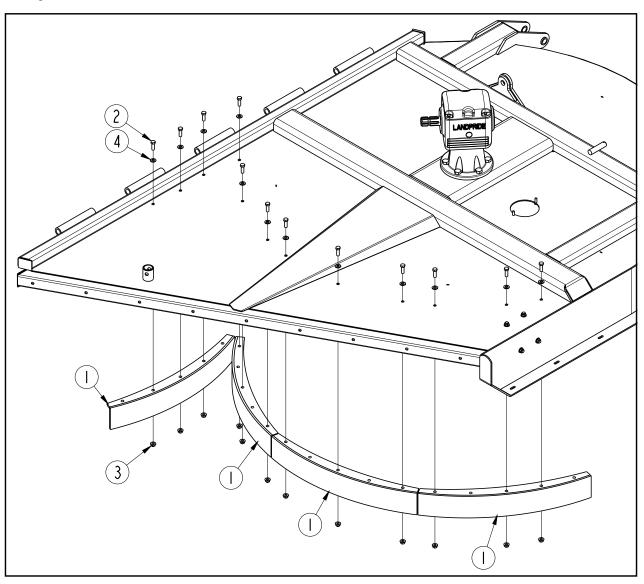

Baffle Installation (Left Wing Shown)
Figure 2

3/11/10 Manual No. 330-148M



## Shredder/Fixed Blade Kit Kit No. 330-308A

A detailed listing of parts for this accessory kit is provided on page 11. Use the list as a checklist to inventory parts received. Please contact your local Land Pride dealer for any missing hardware.

**IMPORTANT:** Read "Safety Information" on page 1 before installing shredder blades.

#### Refer to Figure 3 & Figure 4:

 Remove all three existing blade carrier assemblies (not shown) from the gearbox output shafts (A & B). Keep flat washers (C), slotted hex nuts (D) and cotter pins (E) for reuse.

## Right Wing Shredder Assembly (Part No. 330-228S)


#### Refer to Figure 3:

- 1. Attach right wing shredder assembly (#1) to gearbox output shaft (A) with existing washer (C) and slotted hex nut (D). Torque slotted nut to 550 ft./lbs.
- 2. Install cotter pin (E) in the slotted nut and through output shaft (A). Secure cotter pin (E) by bending its legs around the nut.


## Center Deck & Left Wing Shredder Assembly (Part No's. 330-302S)

#### Refer to Figure 4:

- Attach center deck and left wing shredder assemblies (#2) to gearbox output shafts (B) with existing washer (C) and slotted hex nut (D). Torque slotted nut to 550 ft./lbs.
- 2. Install cotter pin (E) in the slotted nut and through output shaft (B). Secure cotter pin (E) by bending its legs around the nut.

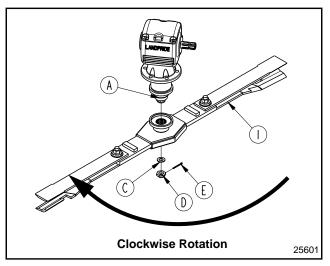

Right Wing Shredder Assembly (P/N 330-228S) Figure 3

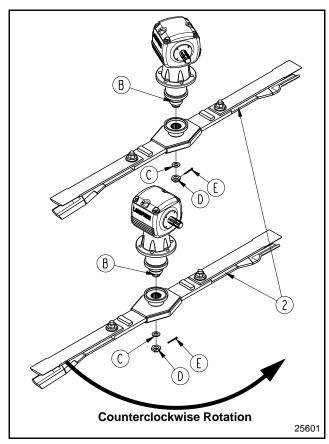

Center Deck Shredder Assembly (P/N 330-302S) And Left Wing Shredder Assembly (P/N 330-302S) Figure 4



5

#### **Check Free Vertical Movement of Blades**

#### Refer to Figure 5:

The cutting blades should not have more than 3/4" free vertical movement at the blade tips. If vertical movement exceeds 3/4", install or change to thicker spacers (#3) following steps 1 through 5.

Order spacers (#3) and locknuts (#7) from your nearest Land Pride Dealer.

**IMPORTANT:** Read "Safety Information" on page 1 before disassembling the shredder blades.

**IMPORTANT:** Locknuts can lose their ability to lock properly once removed. Always use a plain throwaway nut during pre-assembly of spacers.

**IMPORTANT:** Spacers (#3) are not required if vertical movement at blade tip is 3/4" or less without spacers. However, spacers are required if vertical movement at blade tip is greater than 3/4". **This is particularly important when using fixed blades.** 

- 1. Check blade deflection. If vertical deflection at the blade tip is greater than 3/4", remove blade bolt (#6) and reassemble using thicker spacers (#3). Select spacer thickness based on deflection. The greater the deflection, the thicker the spacer required.
- Assemble blades by inserting 1"-8 x 4 1/2" GR8 hex head bolt (#6) through blade bushing (#4), spacer (#3), lower cutting blade (#8 or #10), blade carrier (#5), upper flat cutting blade (#9), spacer (#3) and blade bushings (#4). Temporary secure blade with a plain hex nut (Plain hex nut furnished by customer.) Draw nut up snug. Do not tighten.
- 3. Check blade deflection. If deflection at the blade tips are greater than 3/4", remove blade bolt and reassemble as before with thicker spacers.
- 4. Once blade deflection is correct, replace plain nut with supplied locknut (#7) & torque to 450 ft-lbs.
- Repeat "Check Free Vertical Movement of Blades" instructions for the remaining shredder blade assemblies.

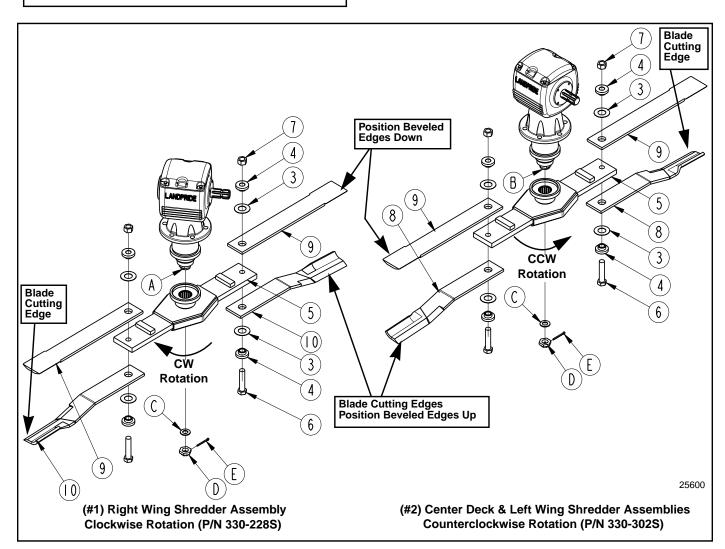


Figure 5




#### **Fixed Blade Mounting Holes**


#### Refer to Figure 6:

The bolt holes for mounting fixed blades to the wing decks are not included on earlier models. See location of mounting holes below to determine if your cutter has the mounting holes. If mounting holes are present, skip to "Center Deck Fixed Blade Assembly" on page 7. If holes are missing, add them to the deck as follows:

- 1. Locate and drill four 9/16" dia. holes on the left wing deck as shown in Figure 1.
- 2. Repeat step 1 above for the right wing deck.

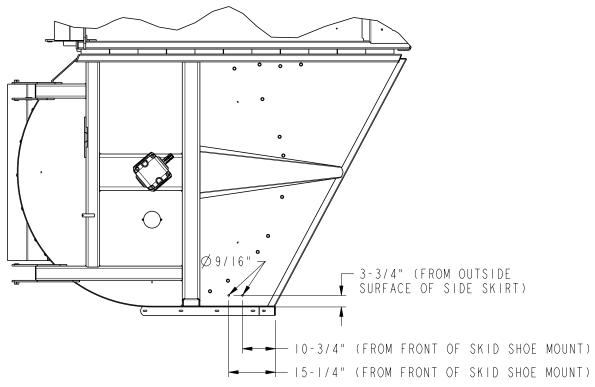

NOTE: DRAWING IS DIMENSIONED WITHOUT REPLACEABLE, BOLT-ON SKID SHOE

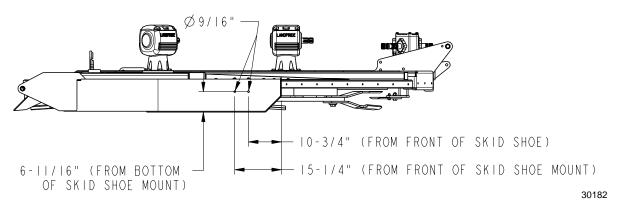

Bolt Hole Pattern For Mounting Fixed Blades On The Wings (Left Wing Shown Figure 6



## Center Deck Fixed Blade Assembly (Part No. 330-304K)

#### Refer to Figure 7:

Attach center fixed blade assembly (#3) to the left front corner of the center deck as follows:

- 1. Remove existing skid shoe bolt (#5) and discard.
- 2. Insert 1/2"-13 x 3" GR5 hex head cap screw (#5) through top of deck and fixed blade assembly (#3). Secure cap screw with hex whiz nut (#8).
- 3. Insert two 1/2"-13 x 1 3/4" GR5 hex head cap screws (#7) through the fixed blade assembly and out the front of the center deck. Secure cap screw with hex whiz nut (#8).
- 4. Tighten hex whiz nuts to 76 ft-lbs.



#### Refer to Figure 8:

Attach left wing fixed blade assembly (#1) to the left front corner of the wing deck as follows:


- 1. Insert two 1/2"-13 x 1 1/4" GR5 hex head cap screws (#4) up through the fixed blade assembly (#1) and through the top of the left wing deck. Secure cap screw with hex whiz nut (#8).
- 2. Insert two 1/2"-13 x 1 1/4" GR5 hex head cap screws (#4) through the fixed blade assembly side plate and through the side of the left wing deck. Secure cap screw with hex whiz nut (#8).
- 3. Tighten hex whiz nuts to 76 ft-lbs.

# Right Wing Fixed Blade Assembly (Part No. 330-306K)


#### Refer to Figure 9:

Attach right wing fixed blade assembly (#2) to the right front corner of the wing deck as follows:


- Insert two 1/2"-13 x 1 1/4" GR5 hex head cap screws (#4) up through the fixed blade assembly (#2) and through the top of the right wing deck. Secure cap screw with hex whiz nut (#8).
- 2. Insert two 1/2"-13 x 1 1/4" GR5 hex head cap screws (#4) through the fixed blade assembly side plate and through the side of the right wing deck. Secure cap screw with hex whiz nut (#8).
- Tighten hex whiz nuts to 76 ft-lbs.

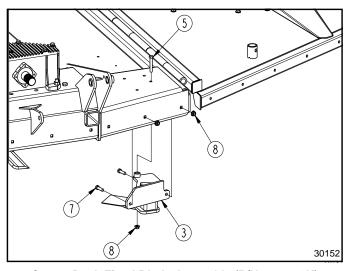

Center Deck Fixed Blade Assembly (P/N 330-304K) Figure 7

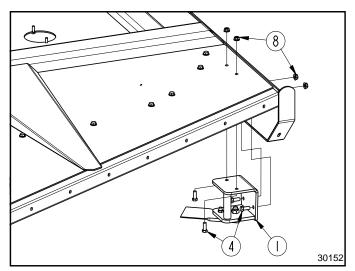

Left Wing Fixed Blade Assembly (P/N 330-305K) Figure 8

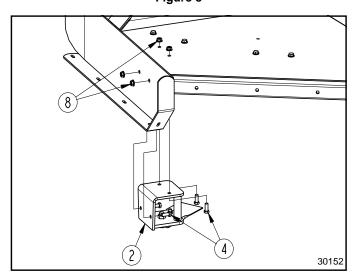

Right Wing Fixed Blade Assembly (P/N 330-306K)
Figure 9



### Rear Baffle Kit Kit No. 330-585A

A detailed listing of parts for this accessory kit is provided on page 11. Use the list as a checklist to inventory parts received. Please contact your local Land Pride dealer for any missing hardware.

**IMPORTANT:** Existing rear guards will need to be removed to install this kit. Be sure to save all hardware with the guards should you choose to reinstall the guards later. **Do not operate cutter without either the baffle or guard in place.** 

## Right Rear Baffle Assembly (Part No. 330-620K)

#### Refer to Figure 10:

- 1. Locate right-hand rear baffle (#19). It is the baffle with mounting plate extending pass the deflector on the right side as shown. The mounting plate is flush with the deflector on the left side.
- 2. Install right-hand rear baffle (#19) at the back of the right wing deck by inserting 1/2"-13 x 1 1/2" GR5 round-head, square-neck bolts (#23) through the deck's rear curved plate first and then through the rear baffle mounting plate as shown.
- 3. Secure bolt with hex whiz nuts (#24) and torque to 76 ft-lbs.

## Left Rear Baffle Assembly (Part No. 330-621K)


#### Refer to Figure 11:

- 1. Locate left-hand rear baffle (#20). It is the baffle with the mounting plate extending pass the deflector on the left side as shown. The mounting plate is flush with the deflector on the right side.
- 2. Install left-hand rear baffle (#20) at the back of the left wing deck by inserting 1/2"-13 x 1 1/2" GR5 round-head, square-neck bolts (#23) through the deck's rear curved plate first and then through the rear baffle mounting plate as shown.
- Secure bolts with hex whiz nuts (#24) and torque to 76 ft-lbs.


## Center Rear Baffle Assembly (Part No. 330-622K)

#### Refer to Figure 12:


- Install center rear baffle (#21) at the back of the center deck by inserting 1/2"-13 x 3 1/2" GR5 roundhead, square-neck bolts (#22) through the center baffle first and then through the rear square tubing as shown
- Secure bolts with hex whiz nuts (#24) and torque to 76 ft-lbs.

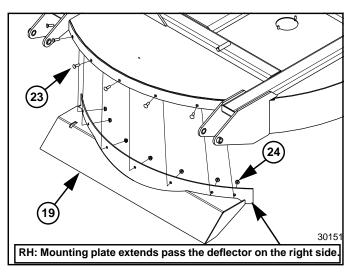

Right-Hand Rear Baffle Assembly (P/N 330-620K) Figure 10

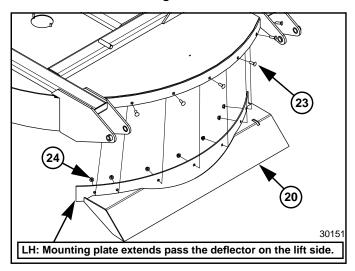

Left-Hand Rear Baffle Assembly (P/N 330-621K) Figure 11

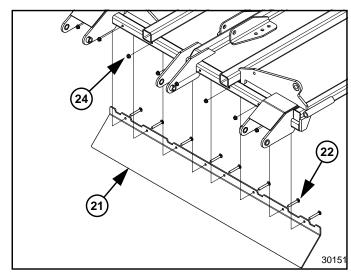

Center Rear Baffle Assembly (P/N 330-622K) Figure 12



9

## **Notes**

3/11/10 Manual No. 330-148M



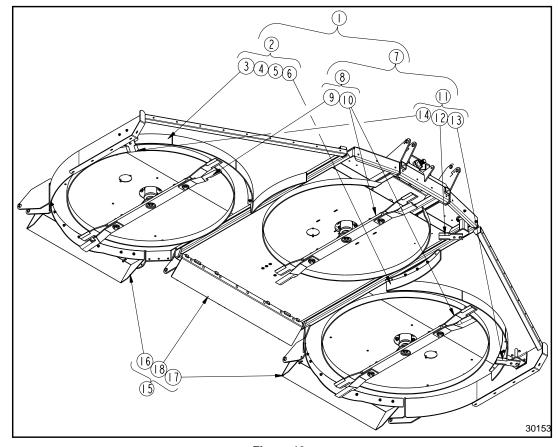


Figure 13

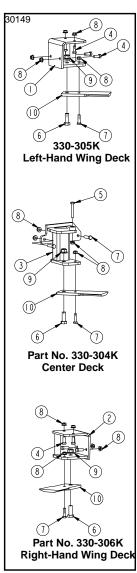


Figure 14

## Kit No. 330-309A

## SHREDDER/FIXED BLADE/BAFFLE

| Item    | Qty.     | Part No. | Part Description                                    |
|---------|----------|----------|---|
| Refer t | o Figure | 13       |   |
| 1 1     | 1        | 330-309A | SHEDDER/FIXED BLADE/BAFFLE (Consist of items 2 & 7) |
| 2       | 1        | 330-114A | ASSEMBLY, 5020 BAFFLE KIT                           |
| 7       | 1        | 330-308A | SHREDDER/FIXED BLADE 5020'                          |

## Kit No. 330-114A

## **BAFFLES, FRONT**

| Item    | Qty.               | Part No. | Part Description  |  |
|---------|--------------------|----------|---|--|
| Refer t | Refer to Figure 13 |          |   |  |
| 2       | 1                  | 330-114A | RC5020 BBAFFLE ASSEMBLY KIT (Consist of items 3 thru 6 and Installation Manual) |  |
| 3       | 8                  | 330-095H | BAFFLE 5020   |  |
| 4       | 24                 | 802-091C | HHCS 1/2-13X1 1/2 GR5   |  |
| 5       | 24                 | 803-037C | NUT HEX WHIZ 1/2-13 PLT   |  |
| 6       | 24                 | 804-016C | WASHER FLAT 1/2 SAE PLT   |  |
|         | 1                  | 330-625M | BAFFLE KIT INSTALLATION MANUAL  |  |



## Kit No. 330-308A

## SHREDDER/FIXED BLADE

| Item     | Qty.               | Part No.             | Part Description  |  |
|----------|--------------------|----------------------|---|--|
| Refer to | Refer to Figure 13 |                      |   |  |
| 7        | 1                  | 330-308A             | SHREDDER/FIXED BLADE 520 (Consist of items 8 & 11)                    |  |
| 8        | 1                  | 330-303L             | SHREDDER KIT 5020 (Consist of items 9 & 10)                           |  |
| 9        | 1                  | 330-228S             | 84" CW BLADE CARRIER ASSEMBLY   |  |
| 10       | 2                  | 330-302S             | 84" CCW BLADE CARRIER ASSEMBLY  |  |
| 11       | 1                  | 330-307L             | FIXED BLADE ASSEMBLY (Consist of items 12, 13 & 14)                   |  |
| 12       | 1                  | 330-304K             | CENTER DECK FIXED BLADE ASSEMBLY                                      |  |
| 13       | 1                  | 330-305K             | LEFT-HAND WING DECK FIXED BLADE ASSEMBLY                              |  |
| 14       | 1                  | 330-306K             | RIGHT-HAND WING DECK FIXED BLADE ASSEMBLY                             |  |
|          |                    | 5 on page 5:         |   |  |
|          | -                  |                      | 8S CW Blade Assembly (Quantities shown are for one Assembly)          |  |
| 3        | 4                  | 312-075D             | BLADE SPACER 16 GA  A maximum of four spacers                         |  |
| 3        | 4                  | 312-082D             | BLADE SPACEN 10 GA  |  |
| 3        | 4                  | 312-089D             | BENDE OFNOEN 20 ON.   |  |
| 3        | 4                  | 312-808D             | BLADE SPACER 24GA   |  |
| 4        | 4                  | 318-309D             | BLADE BUSHING   |  |
| 5<br>6   | 1                  | 330-227H             | BLADE BAR 43"   |  |
| 7        | 2                  | 802-680C             | HHCS 1-8 X 4 1/2 PLT GR8  |  |
| 9        | 2<br>2             | 803-168C<br>820-377C | NUT HEX TOP LOCK 1-8 PLT<br>CUTTER BLADE 1/2 x 4 x 23.5 FLAT          |  |
| 10       | 2                  | 820-170C             | CUTTER BLADE 1/2 x 4 x 23.5 FLAT                                      |  |
| 1        |                    |                      | 2S CCW Blade Assembly (Quantities shown are for one Assembly)         |  |
| 1 ` ′    | 4                  | 312-075D             | PLADE SPACED 16 CA  |  |
| 3 3      | 4                  | 312-075D<br>312-082D | BLADE SPACER 18 GA  A maximum of four spacers                         |  |
| 3        | 4                  | 312-089D             | BLADE SPACER 20 GA. are used per assembly.                            |  |
| 3        | 4                  | 312-808D             | BLADE SPACER 24GA   |  |
| 4        | 4                  | 318-309D             | BLADE BUSHING   |  |
| 5        | 1                  | 330-227H             | BLADE BAR 43"   |  |
| 6        | 2                  | 802-680C             | HHCS 1-8 X 4 1/2 PLT GR8  |  |
| 7        | 2                  | 803-168C             | NUT HEX TOP LOCK 1-8 PLT  |  |
| 8        | 2                  | 820-169C             | CUTTER BLADE 1/2 x 4 x 23 CCW   |  |
| 9        | 2                  | 820-377C             | CUTTER BLADE 1/2 x 4 x 23.5 FLAT                                      |  |
| Refer to | o Figure           | 14 on page 1         | 0:  |  |
| Compo    | onents fo          | or 330-307L F        | ixed Blade Assembly (Quantities shown are for all 3 Blade Assemblies) |  |
| 1        | 1                  | 330-299H             | BRACKET, FIXED BLADE LH   |  |
| 2        | 1                  | 330-300H             | BRACKET, FIXED BLADE RH   |  |
| 3        | 1                  | 330-301H             | BRACKET, FIXED BLADE 20' CENTER DECK                                  |  |
| 4        | 8                  | 802-034C             | HHCS 1/2-13X1 1/4 GR5   |  |
| 5        | 1                  | 802-039C             | HHCS 1/2-13X3 GR5   |  |
| 6        | 3                  | 802-064C             | HHCS 3/4-10X2 GR5   |  |
| 7        | 5                  | 802-082C             | HHCS 1/2-13X1 3/4 GR5   |  |
| 8        | 14                 | 803-037C             | NUT HEX WHIZ 1/2-13 PLT   |  |
| 9        | 3                  | 803-299C             | NUT HEX FLG TOP LK 3/4-10 PLT   |  |
| 10       | 3                  | 820-373C             | CUTTER BLADE 1/2X4X10.25CW/CCW  |  |

## Kit No. 330-585A

## **BAFFLES, REAR**

| item                             | Qty.  | Part No.   | Part Description  |  |
|----------------------------------|---|--|---|--|
| Refer to                         | Refer to Figure 13  |  |   |  |
| 15<br>16<br>17<br>18             | 1<br>1<br>1<br>1  | 330-585A<br>330-620K<br>330-621K<br>330-622K                         | BAFFLES, REAR (Consist of items 16, 17 & 18) BAFFLE ASSEMBLY, RH REAR BAFFLE ASSEMBLY, LH REAR BAFFLE ASSEMBLY, CENTER REAR |  |
|                                  | Refer to Figure 10, Figure 11 & Figure 12 on page 8: Components for 330-585A Rear Baffles (Quantities shown are for all 3 Rear Baffles) |  |   |  |
| 19<br>20<br>21<br>22<br>23<br>24 | 1<br>1<br>1<br>8<br>14<br>22  | 330-617H<br>330-618H<br>330-159D<br>802-585C<br>802-106C<br>803-037C | REAR BAFFLE RH REAR BAFFLE LH DEFLECTOR CENTER RHSNB 1/2-13X3 1/2 GR5 PLT RHSNB 1/2-13X1 1/2 GR5 NUT HEX WHIZ 1/2-13 PLT    |  |

3/11/10 Manual No. 330-148M **11** 



Corporate Office: P.O. Box 5060 Salina, Kansas 67402-5060 USA www.landpride.com